




## Garden Chair Assembly Instructions

**Thank you** for your purchase of the Built to Last Garden Chair. Simply follow the directions below and you will soon be ready to enjoy your chairs.

Please note that your receipt is in the packing list pocket on the outside of box #1. Please call us at 877.258.2578 if you have any problems with assembly. Your satisfaction is guaranteed.

First, make sure you have all the pieces: two side sections, a back section, slats numbered 0-11, two arms, a front brace, and two bags of screws.

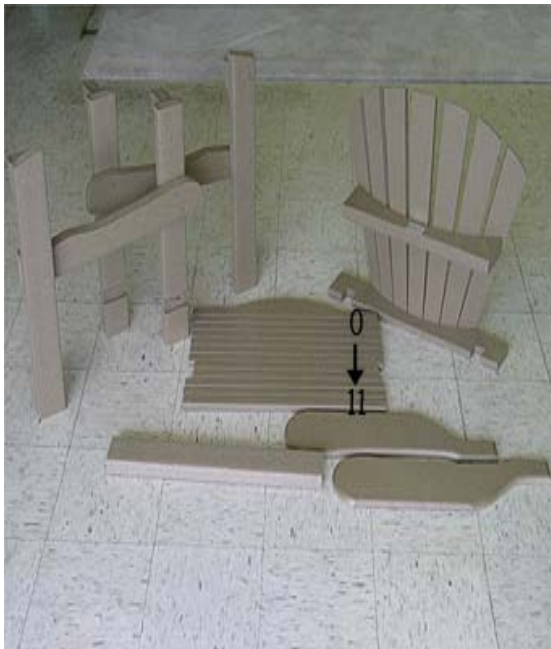

Remove the screws from the bags. A square drive bit will be in the bag with the longer screws.

Start the screws into the countersunk holes on all the pieces.

Note: The shorter screws are for the seat slats and bottom of the back section. The longer screws are for the frame and arm pieces. Extra screws are included.

Advance the screws into the holes until they protrude slightly from the other side. The protruding screws will help you line up pieces when assembling.

Notice that the seat slats are numbered on the underside of each slat - align these in order as shown at left.

After all the screws are started on all pieces, you are ready to assemble. **Follow the sequence on the next page.**

**Keeping your furniture clean:** Maintenance requirements will vary by location. Generally, an occasional rinsing by hose will keep the furniture clean. A pressure washer will do the best job but be careful not to apply too much pressure (which will "feather" the surface). For tough dirt/stains spray Clorox Cleanup or Tilex onto the furniture, allow to sit for a few minutes and rinse off with a hose or pressure wash. Stubborn stains may require a little scrubbing with a scrub-brush. Another option is a mixture of TSP, water and clorox (TSP is found in the paint section of the hardware store).


**Important:** Make sure the pieces being attached are pressed against each other with no gap in between and that the screws are lined up to the predrilled holes. Do not overtighten the screws. Advance the screw until snug. **DO NOT OVERTIGHTEN!** If your drill is not variable speed be very careful not to drive the screw in too far.



Step 2: Match up the arrows to attach the front brace to the two side sections.



Step 3,4: The back comes fully assembled. Attach it to the side sections.

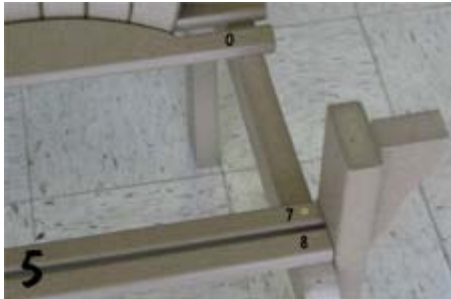

Step 5 & 6: The slats are numbered underneath. Attach #0, then attach the shorter slats #7&8. This will make it easier to line up the holes for the other slats.



Step 7: Attach arms to side sections.

Enjoy your Garden Chair!!!  
877-258-2578 [www.built-to-last.com](http://www.built-to-last.com)