



**BUILT TO LAST**  
FUN FINE FOREVER FURNITURE

## Glider Chair Assembly Instructions

Thank you for your purchase of the  
Built To Last Glider Chair.

Simply follow the directions below and you  
will soon be ready to enjoy your chair.

Please call us at 877.258.2578 if you have  
any questions about assembly.  
Your satisfaction is guaranteed!



### Overview:

- When advancing the screws keep the drill bit lined up with the screw to avoid stripping the head.
- Make sure the pieces being attached are pressed together with no gap in between and that the screws are lined up to the pre-drilled holes. Advance the screw until snug.
- **Do Not Overtighten!** If your drill is not variable speed be careful not to drive the screw in too far.
- Make sure you have all the pieces shown, along with a bag containing 34 long (2½") screws, 4 shorter (1⅝") screws and a square drive bit for your drill.

### Assembly:

Remove the screws from the bag. Start the screws into the countersunk holes on all the pieces.

**Note: the 4 shorter screws are for the bottom of the back section.**


The longer screws go in all the other countersunk holes. There are two extra 2½" screws included in case you need them. Advance the screws into the pieces but do not let them protrude the other side at this time. After all the screws are started you are ready to assemble


### Assemble Base:

Attach the 2 base supports to the inside of the 2 base frames as shown. One drill hole on the end of each base support is marked with a letter that corresponds to a mark on one of the drill holes on each of the base frames for correct positioning.

### Attach Rear Base Support:


Attach the single piece with the router ends to the rear of the base. This piece is also marked for correct placement. Set the base aside and continue to frame assembly.

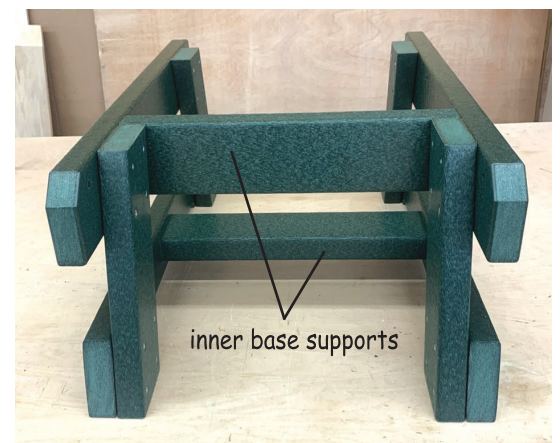

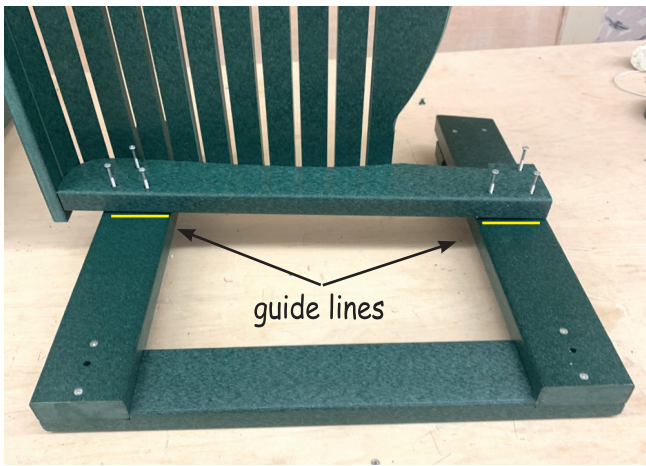


### Attach seat to frames:

lay one side of the frame down with guide marks facing up. Position bottom of seat along guide lines. You can advance screws in seat to slightly protrude the other side to help line up with original drill holes. Tighten screws. Flip and attach other side of frame.

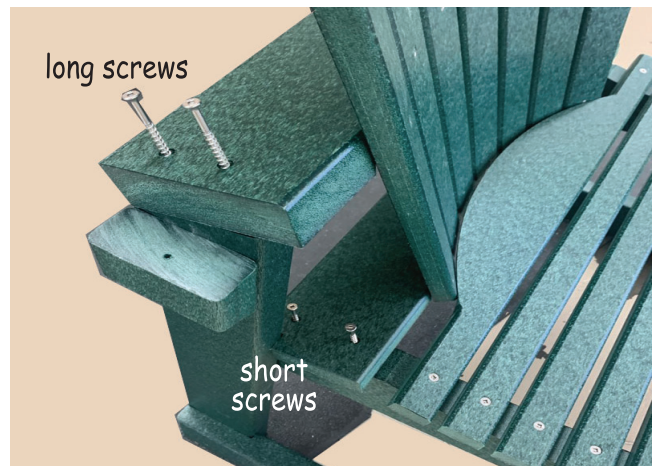

### Attach back:

Set the back section into position. It may need to be squared up to line up screws. Fasten the lower short screws first and then align and fasten the long upper screws.

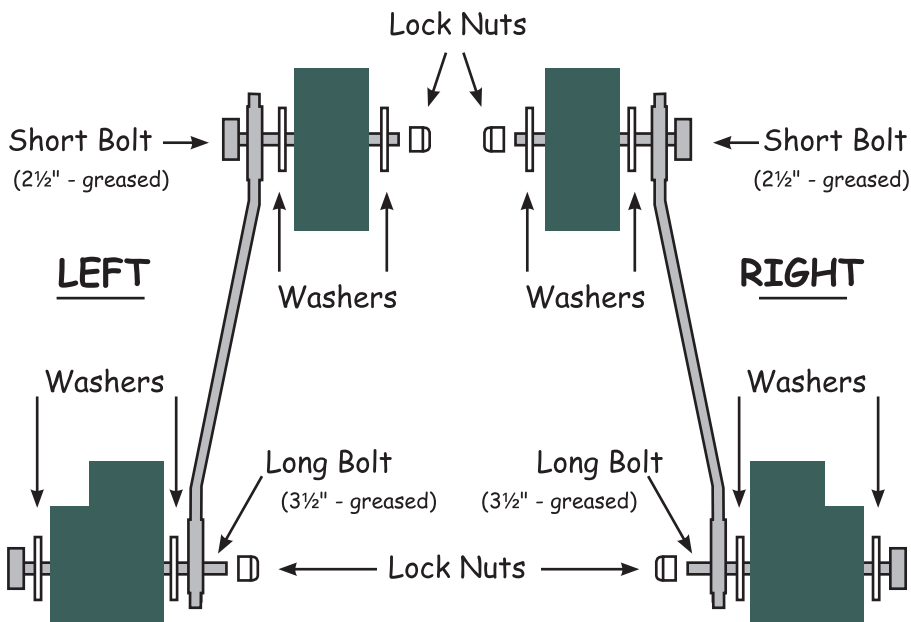

### Install Glider Links:

Fasten bottom of glider links to base. Set assembled frame on top of base. Fasten tops of glider links to frame using the diagram above. Attach arms and start enjoying your new chair!



**BUILT TO LAST**  
FUN FINE FOREVER FURNITURE

877.258.2578

For furniture care advice visit  
[www.built-to-last.com](http://www.built-to-last.com)

